


How to Adjust the Rotating Phase of the Gear, Main Cam

- 1) Push down the hooking catch of the CHAS. MECH, and remove the TRAY.
- 2) Align the arrow mark of the Gear, Main Cam with the black round mark of the CHAS, MECHA as shown below.
- 3) Confirm that the Slide, Mech Cam is located in the right position, then insert the TRAY gently.

Caution: If the rotating phase of the Gear, Main Cam is incorrectly adjusted, the chucking operation and tray movement will have malfunction.

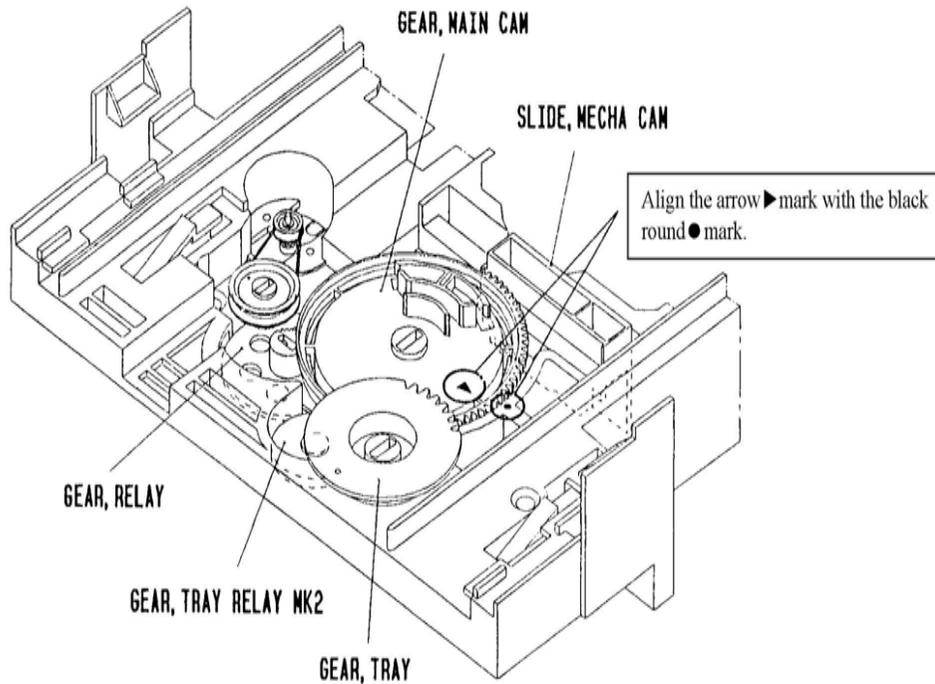

Comment régler la phase de rotation du plateau principal - (*gear, main cam*)

- 1) Presser le crochet de fixation du boîtier du lecteur CD (*chas mech*).
- 2) Retirer le plateau (*tray*).
- 3) Aligner la flèche noire marquée sur le plateau principal (*gear, main cam*) avec le rond noir marqué sur le boîtier du lecteur (*chas, mech*), comme indiqué ci-dessous.
- 4) S'assurer que le tiroir du plateau (*slide, mecha cam*) est bien positionné.
- 5) Insérer avec précaution le plateau (*tray*).

ATTENTION : Si la phase de rotation du disque principal (*gear, main cam*) est mal réglée, le lancement et le mouvement du plateau ne se feront pas correctement.

